


Adjusting an awning lead rail

Adjusting the leadrail is sometimes necessary for a flush closing, especially if the awning cassette is not completely in a vertically upright position when fitted. Often this occurs on high roof vans where the cassette is tilted 5 – 8 degrees for example.

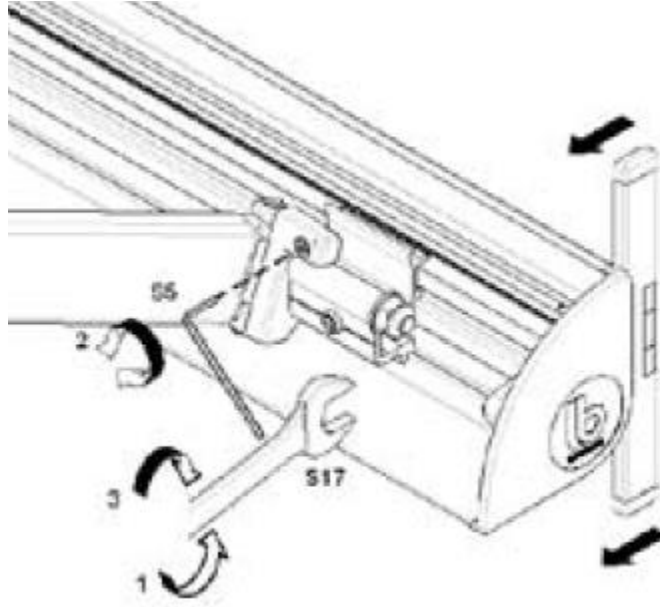

- 1) Extend the awning fully so the fabric is slightly loose.
- 2) Slightly loosen the arm nuts 17mm on the side of the large arm block.
- 3) Tighten the top alan nut to adjust the angle more vertical or turn anti clockwise to angle the leadrail backwards
- 4) Once lead rail is at the desired angle, retighten the nuts on the side of the arm block.